

Quick Start Guide


Model: SLG410

Version: 1.0




Configuring the SLG410 gateway


1. Connect the power cable to the gateway.
2. Connect PC with gateway LAN port by network cable and WAN port with the router, respectively. Both the LAN and WAN LED will blink on the gateway.
3. Configure your PC to **Obtain an IP address automatically** in TCP/IPv4 setting.

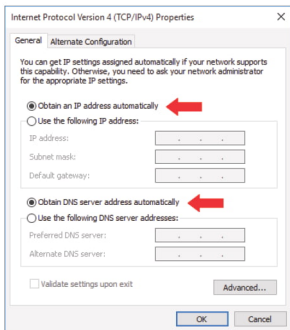

4. Input the default gateway IP address **192.168.82.1** in the web browser to enter the gateway login page. (Default login password is **admin**)

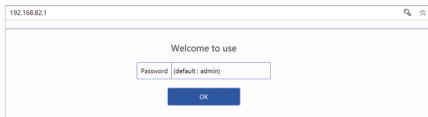

5. After login, the following page shows up:

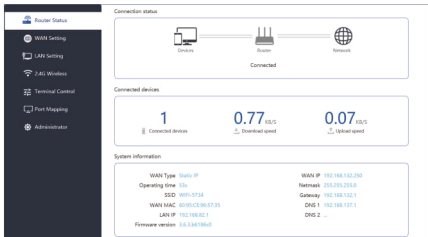


6. Select the **WAN Setting** option to configure a network IP to provide a network to gateway, then follow the step as below:

- (1) Choose the "Static IP" option in WAN Type, then fill out the appropriate **IP address** which is able to access internet. And lick "Netmask" and "Gateway bar", they will fill out authomatically, if no, please fill out manually. (e.g. 192.168.132.250).

The screenshot shows the 'WAN Setting' configuration page. The 'WAN Setting' option in the sidebar is highlighted with a red box. In the main configuration area, the 'WAN Type' section has three radio buttons: 'PPPoE', 'Static IP' (which is selected and highlighted with a red box), and 'DHCP'. There is also an unchecked 'Wireless' option. Below this, a text prompt says: 'Please input IP, subnet mask and other information your operator provided. If forgotten, you can call the operator to find them back.' There are three input fields: 'IP address' containing '192.168.132.250', 'Netmask' containing '255.255.255.0', and 'Gateway' containing '192.168.132.1'. Each of these three fields is highlighted with a red box. To the right of the Gateway field is a link labeled 'Advanced'. At the bottom center is a blue 'OK' button.

- (2) Click **OK** to save. After a successful connection, the gateway configures automatically, and the **Router Status** page changes as shown below.

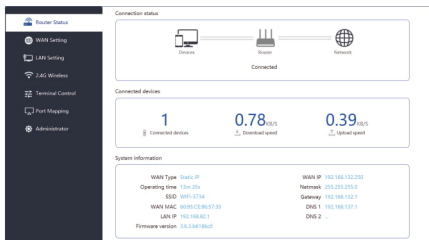

7. Select **Administrator** option, to configure Remote IP and server port.




- (1) The **IP** is the local IP address of client's PC in which the **ZKBioHLMS** software is installed. The server port is **18088** by default.

- (2) Click **OK** to save and it will remind success.

The screenshot shows the 'Administrator' configuration page. The left sidebar is identical to the previous screenshot, with 'Administrator' now selected. The main content area has two sections:

- Password:** Contains three input fields labeled 'Old' (with placeholder 'Please input old password'), 'New' (with placeholder 'Please input new password'), and 'Confirm' (with placeholder 'Please confirm new password'). Below these fields is a blue 'OK' button.
- Remote:** Contains two input fields labeled 'IP' (with the value '172.16.12.22') and 'PORT' (with the value '18088'). Below these fields is a blue 'OK' button.

8. Login to the **ZKBioHLMS** to add the gateway to the platform.
 - (1) Click **Hotel->Device Mgnt->Device->Search**.
 - (2) Click **Search** button to search the gateway and add the configured one.
 - (3) Edit the **Gateway Name** and click **OK**. Then click Refresh, the gateway will appear on the page.

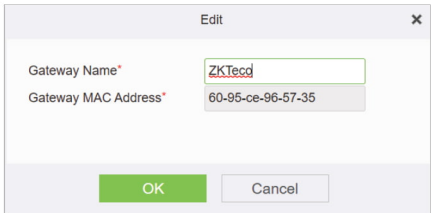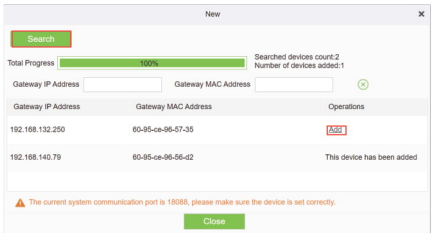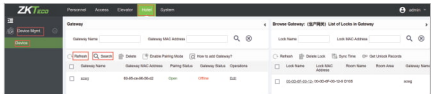

Guía Rápida


Modelo: SLG410

Versión: 1.0




Configurar el Gateway SLG410


1. Conecte el cable de alimentación al Gateway.
2. Conecte la PC con el puerto LAN del Gateway mediante un cable de red y el puerto WAN con el enrutador, respectivamente. Tanto los LED's LAN como el WAN parpadearán en el Gateway.
3. Configure su PC para **obtener una dirección IP automáticamente** en la configuración TCP/IPv4.

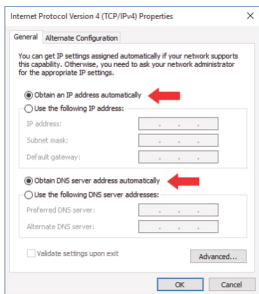

4. Ingrese la dirección IP predeterminada del Gateway **192.168.82.1** en el navegador web para ingresar a la página de inicio de sesión del Gateway. (La contraseña de inicio de sesión predeterminada es **admin**).

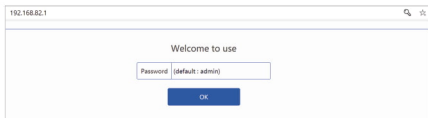


5. Después de iniciar sesión, aparece la siguiente página:

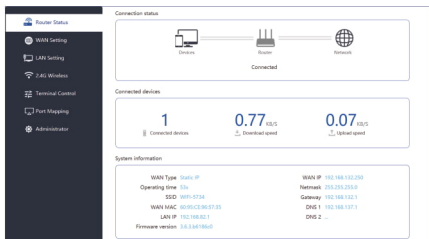


6. Seleccione la opción **Configuración WAN** para configurar una red IP y proporcionar una red al Gateway, luego siga el paso que se indica a continuación:

- (1) Elija la opción "IP estática" en Tipo WAN, luego complete la **dirección IP** apropiada que puede acceder a Internet. Llene la "Máscara de red" y "Dirección del Gateway", se completarán automáticamente, si no, complete manualmente. (por ejemplo, 192.168.132.250).

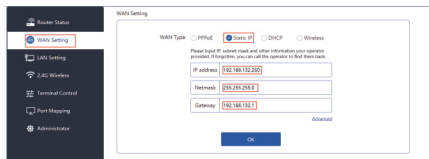

- (2) Haga clic en **OK** para guardar. Después de una conexión exitosa, el Gateway se configura automáticamente y la página de **estado del enrutador** cambia como se muestra a continuación.



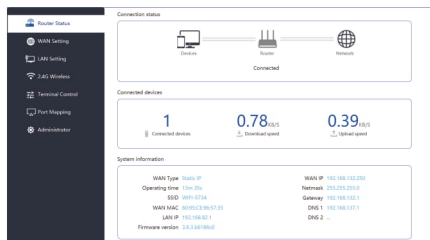


7. Seleccione la opción **Administrador** para configurar la IP remota y el puerto del servidor.

- (1) La IP es la dirección **IP** local de la PC del cliente en la que está instalado el software **ZKBioHLMS**. El puerto del servidor es **18088** por defecto.
- (2) Haga clic en **OK** para guardar y le recordará el éxito.

The screenshot shows two configuration pages. The top page is 'Password', with a sidebar on the left showing 'Administrator' selected. It contains three input fields: 'Old' (placeholder: 'Please input old password'), 'New' (placeholder: 'Please input new password'), and 'Confirm' (placeholder: 'Please confirm new password'). An 'OK' button is at the bottom. The bottom page is 'Remote', with the same sidebar. It contains two input fields: 'IP' (with the value '172.16.12.22') and 'PORT' (with the value '18088'). An 'OK' button is at the bottom.

8. Inicie sesión en **ZKBioHLMS** para agregar el Gateway a la plataforma.
 - (1) Haga clic en **Hotel -> Device Mgmt -> Device -> Search**.
 - (2) Haga clic en el botón **Buscar** para encontrar el Gateway y agregar el configurado.
 - (3) Edite el **nombre del Gateway** y haga clic en **OK**. Luego haga clic en Actualizar, el Gateway aparecerá en la página.

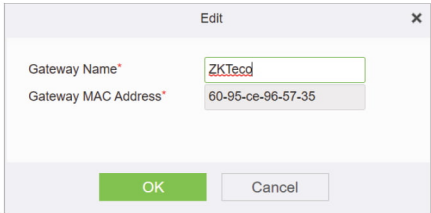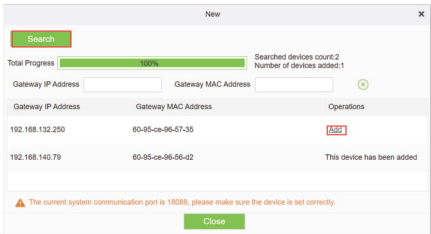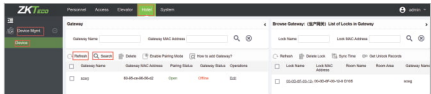

ZKTeco Industrial Park, No. 32, Industrial Road,
Tangxia Town, Dongguan, China.

Phone : +86 769 - 82109991

Fax : +86 755 - 89602394

www.zkteco.com

